



Camera Reset

This is a step-by-step guide to resetting the Sony Cyber-shot camera.

Written By: Katie McCraw





TOOLS:


- [Paper Clip](#) (1)
-

Step 1 — Camera Reset



- Pull the battery cover in a downward motion, following the arrow on the cover, until it is released.

Step 2

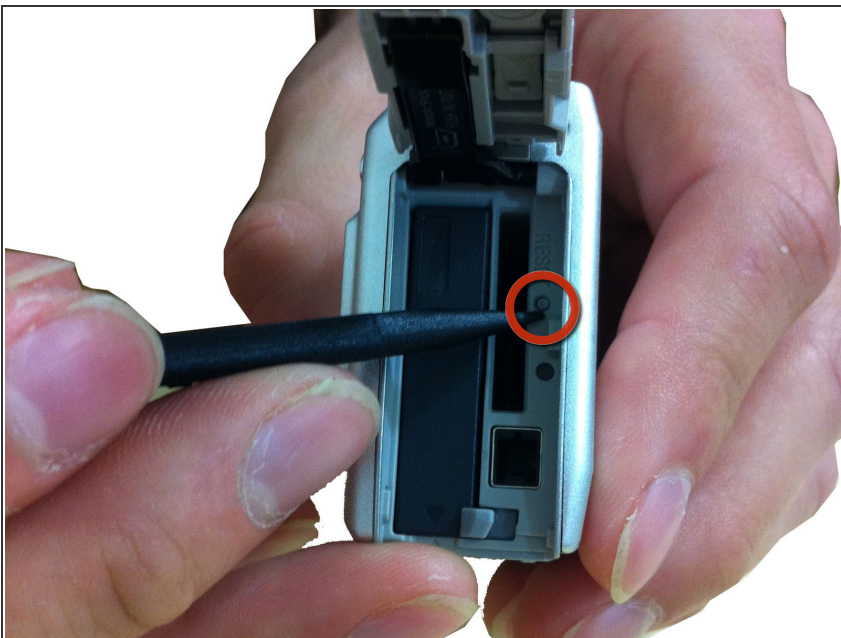

- Locate the reset button near the battery compartment and push the button with a pointed object such as a paper clip or pry tool.

Step 3



- Close the battery cover.

This document was last generated on 2017-07-04 01:12:16 AM.